

Roof Rail Crossbar User Instruction

FITTING MODELS TOYOTA HIGHLANDER 2020 AND BEYOND



PART LIST

BRACKETS



BRACKET PAD



COVER



BAR



ACCESSORIES



TOOLS




TIPS

Longer bar at the front
Shorter bar at the rear

Wide side at the front
Narrow side at the rear



ASSEMBLY

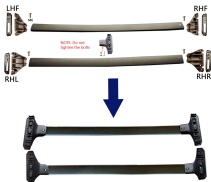

SUPPORT

Visit <https://rockautoaccess.com> for more products
Contact at rocktoex.com@gmail.com for any concerns or problems in Canada.

 
100% customer service satisfaction guaranteed.

LOAD CAPACITY: Maximum 70 KG/154 LBS in total, evenly distributed, 35 KG per crossbar.

INSTALLATION



1. Locate 4 covers on rain gutters on roof of vehicle. Use the trim removal tool to remove caps by prying up from inner side and rotating outward.



2. Slide the angled-bolt underneath the metal hook of the slot area. Place crossbar over the bolt on the slot area aligning hole in stanchion. Ensure crossbars are in correct position by designations on stanchions (RHL, RHR, LHL, LHR). Install washer and nut on the bolt. Ensure pads located underneath the supports fit the rain channel for proper assembly. Torque bolts is recommended with appropriate trim wrench.



3. Adjust the aluminum bar to be balance in the middle, then tighten the M6 screw to fix the brackets to aluminum bars with the torx.



4. Slide top of cover over the extrusion and snap the cover into place. Ensure covers are seated properly over extrusion at top and along all edges after snapping into place.



Full Installation View

SAFETY NOTES:

- Never exceed the manufacturer's roof rack load limit.
- Confirm tightness every 600 miles, (1,000 km). When driving long distances, on rough roads, or at high speed, periodically check that the load is secure and that the crossbars are securely tightened.
- Carrying a load may change the driving behavior of the vehicle. Ensure that the load is evenly distributed between the two crossbars and that it is as low as possible.
- Ensure that the crossbar is installed in the correct orientation.
- Ensure that the crossbars are fully tightened to the side support with no gaps.
- Ensure all tethers are securely attached to the stanchions and covers.
- Remove the crossbar when not in use. Keep the parts assembled to avoid losing components.

SUPPORT

Visit <https://rockautoaccess.com> for more products
Contact at rokioextom@gmail.com for any concerns or problems in Canada.

100% customer service satisfaction guaranteed.