

 
Roof Rail Crossbar User Instruction

SPECIFICATION **MODEL YEAR: 2021 Nissan Rogue factory side rails**
MAXIMUM SYSTEM LOAD CAPACITY: 75KG/165lbs in total evenly distributed.


PART LIST

BAR	FRONT BAR (LONGER)		REAR BAR (SHORTER)	
BRACKET				
COVER				
ACCESSORIES				
TOOLS				

TIPS




INSTALLATION

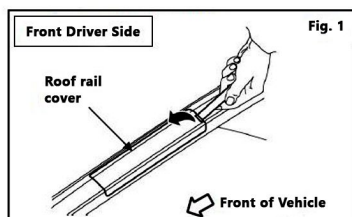

1) Prepare the roof rail for crossbar installation.

a) Using plastic trim stick, carefully remove front driver side roof rail cover and set aside in clear plastic bag.


Do not discard this rail cover.

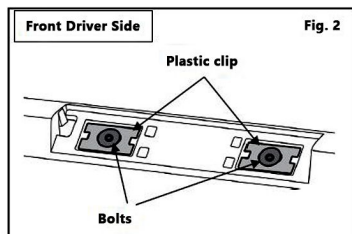


b) After removing the rail covers:

If you see plastic clips and bolts as shown in Fig 2. perform step c) & d) before proceeding to step 2).

If you don't see plastic clip and bolt as shown in Fig 2. skip step c) & d) and proceed to step 2).

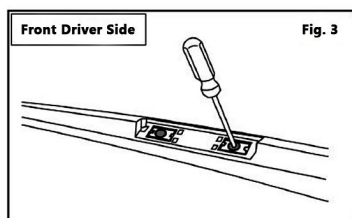

c) Un-fasten and remove the bolts using the torx screw driver and set aside in clear plastic bag

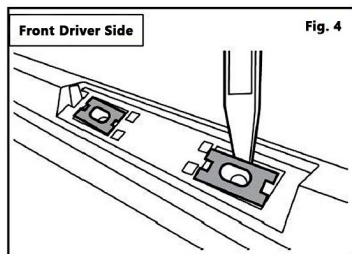

d) Remove the plastic clips using plastic trim stick and set aside in clear plastic bag.

e) Follow steps a) to d) for removal of other 3 roof rail covers.

NOTE:
Keep roof rail covers, bolts & plastic clips in a clear plastic bag and store in secure area such as glove box for future use.

SUPPORT


Visit <https://rockautoaccs.com> for more products
 Contact at rokiotoexcom@gmail.com for any concerns or problems in Canada.

100% customer service satisfaction guaranteed.

Roof Rail Crossbar User Instruction

SPECIFICATION **MODEL YEAR: 2021 Nissan Rogue factory side rails**
MAXIMUM SYSTEM LOAD CAPACITY: 75KG/165lbs in total evenly distributed.

INSTALLATION

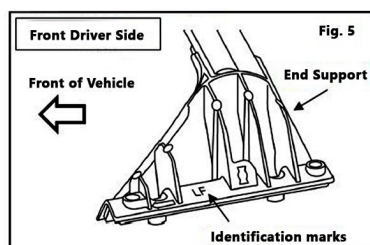


2) Identify FRONT crossbar, REAR crossbars and plastic covers. End supports & plastic covers have below identification marks.

LF is FRONT crossbar driver side
 RF is FRONT crossbar passenger side
 LR is REAR crossbar driver side
 RR is REAR crossbar passenger side

CAUTION


Do not remove foam on the end support and plastic cover. Removing foam may cause loud windnoise.

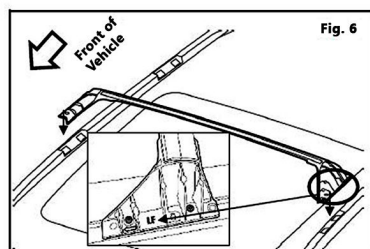

3) Install the FRONT crossbar on the vehicle roof rail by aligning the holes on the end support of crossbar to the threaded holes on roof rail bracket.

NOTE:


Arrow direction on end support should always be oriented toward front of vehicle.

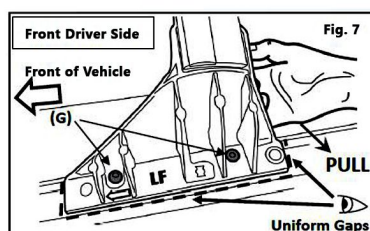

4) While aligned, insert and hand start M6L bolts with washers (G) on both driver side and passenger side. Adjust the crossbar end support to maintain uniform gap with roof rail.

NOTE:

Carefully pull the crossbar end support with slight force in the cross car direction as shown in Fig. 7 to maintain uniform gap with roof rail.

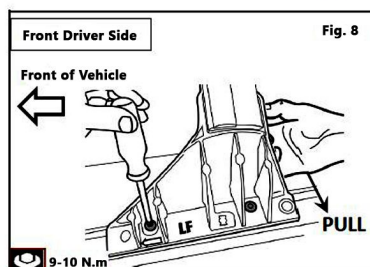


5) With T27, tighten all the 4X bolts. While tightening bolts, carefully pull the crossbar end support (See Fig 8) with slight force in the cross car direction.

NOTE:

Please check bolts are torqued to 6.6-7.4 lbf.ft (9- 10 N.m) using T27.

WARNING

Failure to properly torque bolts to the minimum required value may result in the loss of load and may cause an accident causing severe personal injury, or death.

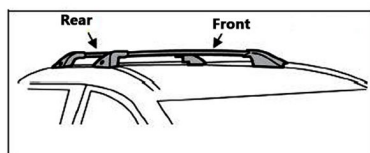

6) Check the crossbars

After assembly of both front and rear crossbar, wiggle crossbars with hand to check for loose parts.

NOTE:

If either crossbar is loose, uninstall crossbar and repeat the steps 1) through 5) carefully.

SUPPORT

Visit <https://rockautoaccs.com> for more products
 Contact at rokioetoxcom@gmail.com for any concerns or problems in Canada.

100% customer service satisfaction guaranteed.


Roof Rail Crossbar User Instruction

SPECIFICATION

MODEL YEAR: 2021 Nissan Rogue factory side rails

MAXIMUM SYSTEM LOAD CAPACITY: 75KG/165lbs in total evenly distributed.

INSTALLATION

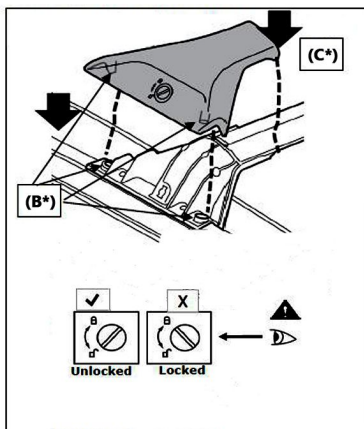

7) Install covers

a) Locate the corresponding Crossbar cover for each location:

LF - Left Front
LR - Left Right
RF - Right Front
RR - Right Rear

b) To install plastic covers:

- Make sure cover lock is in unlocked position.
- Carefully align socket and hole joint (B*), making sure they are centered and apply slight downward force until the cover snaps into place.
- Push down on the top face of the cover (C*) to engage it with crossbar.

c) Put the button lock in the cover and push down to the bracket lever slot, then use the socket key to turn 90 degree to a locked position.

WARNING


Don't install this in cold condition lower than -10 Celcius.

8) Remove the crossbars

For removing the crossbar from vehicle please follow steps 1) through 7) in reverse order.

CAUTION

For removing the plastic cover, first turn the lock lever to unlock position. After that use a plastic trim stick to un-snap the cover and slowly remove the plastic cover. Failure to do so may cause damage to cover.

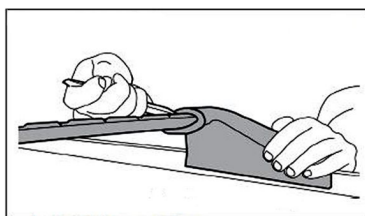

FULL INSTALLATION VIEW



SAFETY NOTES

- Do not remove load label on driver side end supports.
- Never exceed load rating shown on the load label and always evenly distribute the luggage between front & rear crossbar.
- Be careful that your vehicle does not exceed the Gross Vehicle Weight Rating (GVWR) or its Gross Axle Weight Rating (GAWR Front and Rear). The GVWR and GAWR are located on the Safety Compliance Certification Label (located on the driver side door pillar).
- Always secure roof loading with ropes and cable to prevent it from falling off during driving

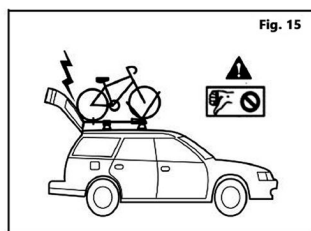


Fig. 15

- When FrontLoader bike carrier (Fig 15) or other similar long accessory part is installed on top of vehicle, opening the lift gate fully may cause damage.

Please consider the following 2 options to avoid contact between your long accessory part and lift gate.

a) Install bike carriers rearward facing (Fig 16) to avoid contact with fully opened lift gate.

Or

b) Lift gate height can be adjusted to avoid contact for most long accessory parts.

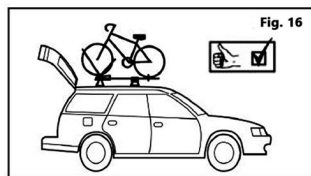


Fig. 16

SUPPORT

Visit <https://rockautoaccs.com> for more products

Contact at rokiotoexcom@gmail.com for any concerns or problems in Canada.

100% customer service satisfaction guaranteed.