CROSSBARS INSTALLATION GUIDE

For Infiniti QX60 Roof Rack Crossbars

SPECIFICATION

Model year:	Fits Roof Rack Crossbars Fits 2022+ Infiniti QX60 Models. NOTE: In Order To Use Our Roof Racks Your Car Must Have Roof Rails. Roof Rails Are Not Included In Package.
Maximum load capacity:	75KGs/165LBs in total, evenly distributed
⚠	Refer to car user manual for the recommended limitation from factory.

PART LIST

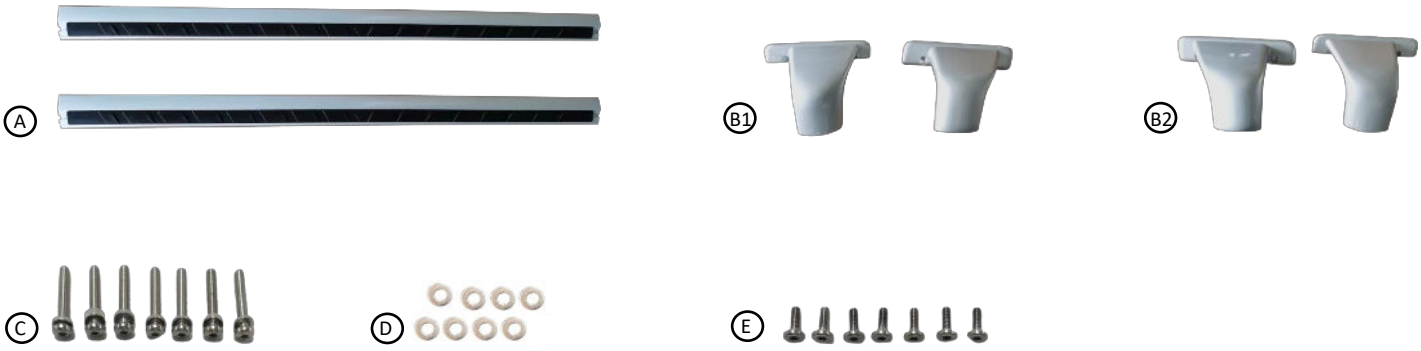

TOOLS INCLUDED

T27 wrench

TOOLS NEEDED (NOT INLCUDED)

① Plastic trim stick

PART INDEX	DESCRIPTION	QTY.
A	Aluminum bars **(Same Lengths)**	2
B1	Left/Driver Brackets (FR- LH, RR- LH)	2
B2	Right/Passenger Brackets (FR- RH, RR- RH)	2
C	M6x32mm Bolts (for fixing brackets to rails)	8
D	Washers	8
E	M5x16mm Bolts (for fixing brackets to bars)	8

1 ASSEMBLY

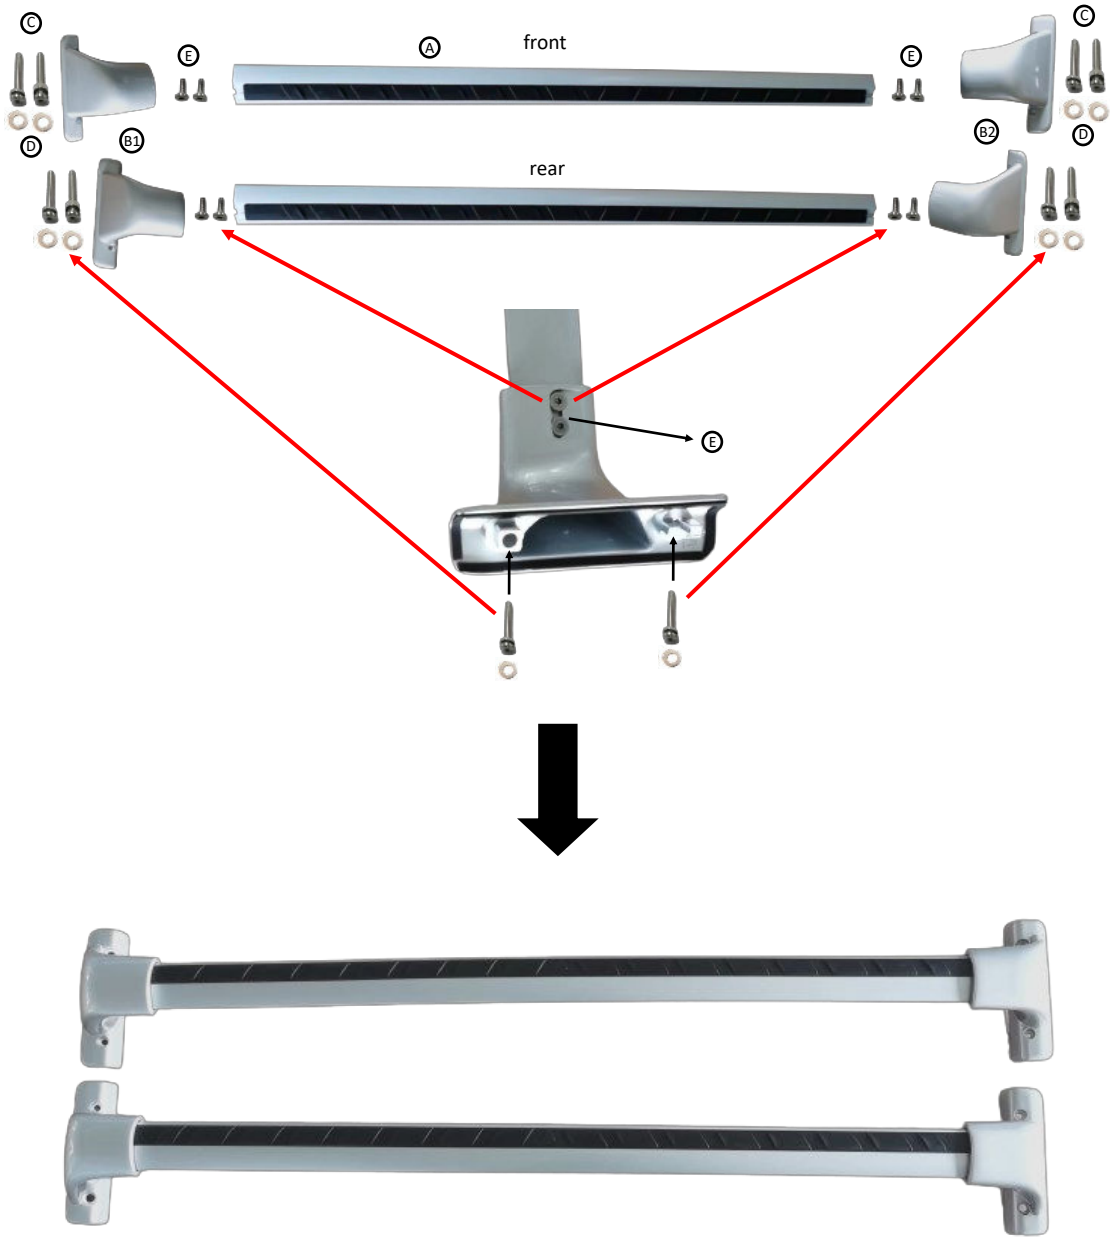

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS

- Professional installation is highly recommended to correctly and safely assemble this part to your vehicle.
- Read through all of the instructions and ensure that all tools stated in the instructions are available before starting installation.
- Removal and re-installation of Crossbars requires re-application of thread locking adhesive LOCTITE® 242® or equivalent on T-30 Torx bolt's.

⚠ WARNING

Before installing crossbars, close sunroof and protect painted area on the vehicle roof by placing a piece of cloth under cross bar legs, in order to prevent scratch damage.

3 INSTALLATION

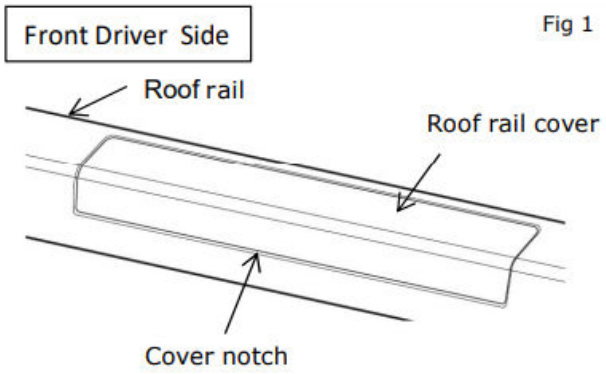

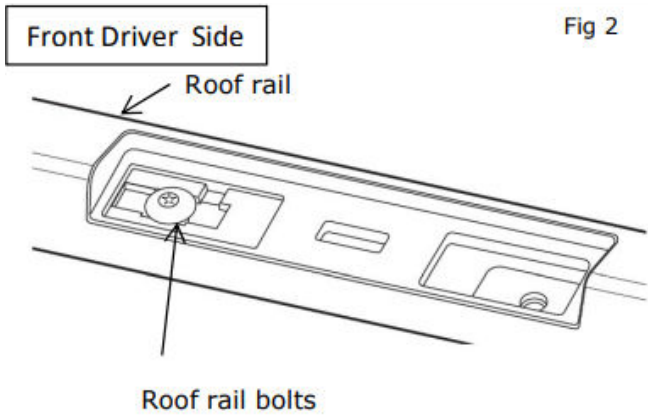

1. Prepare the roof rail for crossbar installation.

   a) Insert plastic trim stick ① in the front driver side cover notch and carefully un-snap the roof rail cover metal clip. Remove front driver side roof rail cover and set aside.

   b) Following the above process, remove the remaining 3 qty roof rail covers from the roof rail.

   c) Keep all the 4 qty roof rail covers in a zip lock bag.

   d) Remove all the 4 qty roof rail bolts shown in Fig 2.

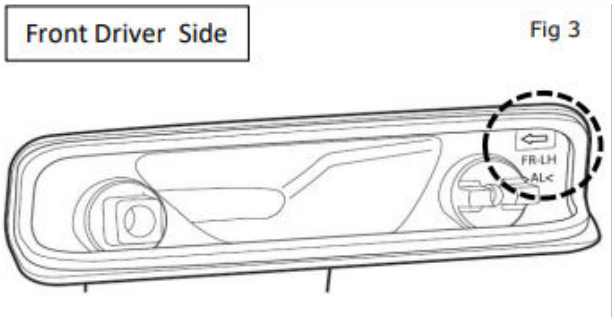

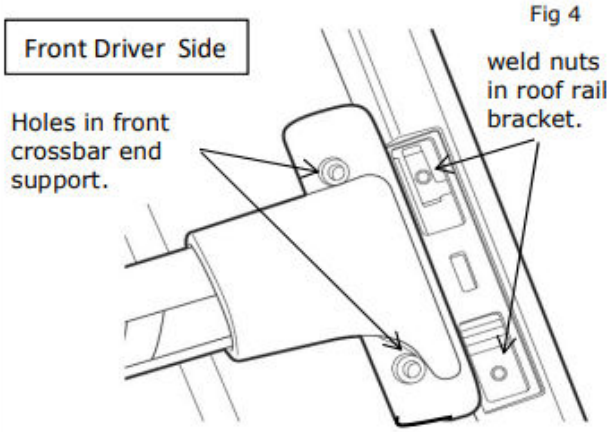

2. Identify the front and rear crossbars with part markings on end support

NOTE:

FR- LH is front crossbar driver side.

FR- RH is front crossbar passenger side.

RR- LH is rear crossbar driver side.

RR- RH is rear crossbar passenger side.

Install front crossbar by aligning the holes of front crossbar end support with the weldnuts in roof rail bracket.

3 INSTALLATION

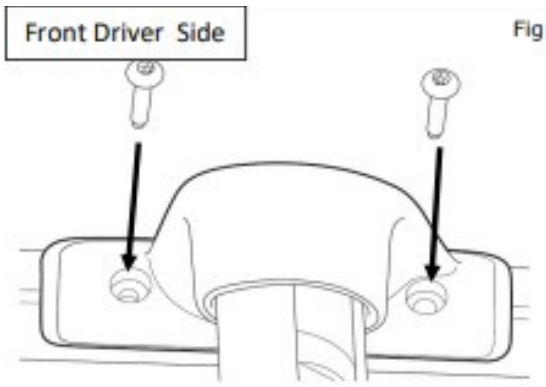

Fig 5

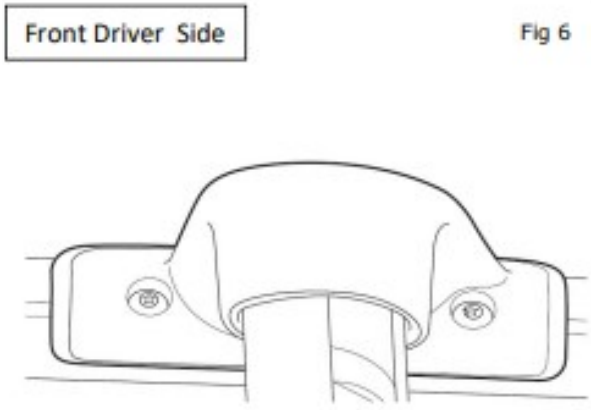

Fig 6

CAUTION

Make sure the cross bar is properly and fully in place on each mounting block at each side rail before tightening to specification.

3. Loosely install 4 X M6 torx bolts on front cross bar .

Note:

- Start bolts by hand to prevent cross threading of bolts. Loosely install 4 X M6 torx bolts on front cross bar.
- Figure shows driver side fastening, passenger side similar.

4. With torx screw driver, tighten all the 4X bolts.

Note:

Please check bolts are torqued to 6.6-7.4 lbf□ft (9- 10 N.m) using Torque wrench.

WARNING

Failure to properly torque bolts to the minimum required value may result in the loss of load and may cause an accident causing severe personal injury, or death.

Fig 7

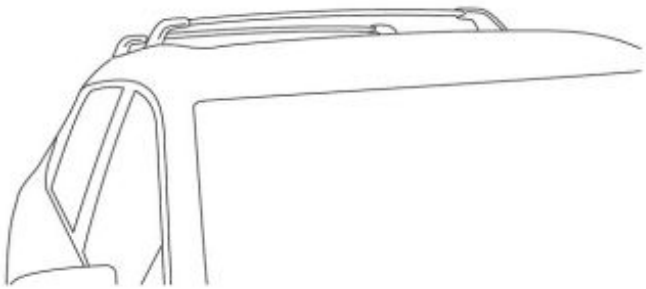

5. Repeat the steps from 1) to 4) for installing the rear crossbar.

3 INSTALLATION

Fig 8

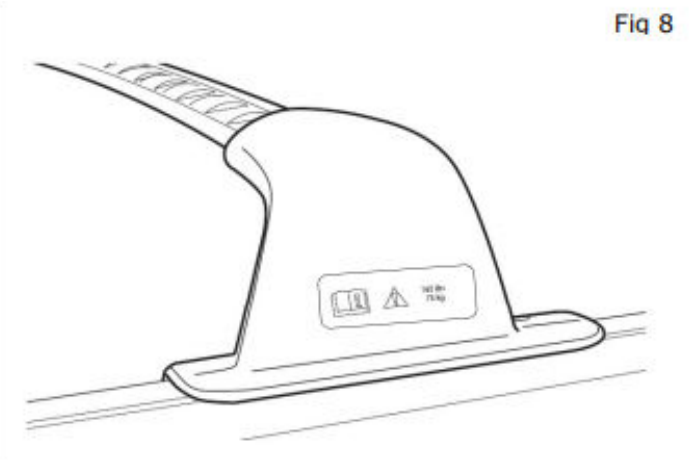

WARNING

- Do not remove load label on driver side end supports.
- Never exceed load rating shown on the load label and always evenly distribute the luggage between front & rear crossbar.
- Be careful that your vehicle does not exceed the Gross Vehicle Weight Rating (GVWR) or its Gross Axle Weight Rating (GAWR Front and Rear). The GVWR and GAWR are located on the Safety Compliance Certification Label (located on the driver side door pillar)
- Always secure roof loading with ropes and cable to prevent it from falling off during driving.
- Do not put load directly on crossbar. To avoid damage to paint and the rubber seal use soft padding or soft cloth on the crossbar before putting rough surface load like plywood, lumber etc.

SUPPORT

Visit https://rockautoaccs.com for more products

Contact at rockmautox@gmail.com for any concerns or problems in Canada.

SAFETY NOTES

Never Exceed the manufacture's roof rack load limit.

Ensure load is evenly distributed between the two crossbars and that it is as low as possible refer to specification.

Confirm lightness every 1000 km, periodically check that the load is secure and crossbars are securely tightened.

Ensure that crossbar installed in correct orientation.

Ensure that the crossbars are fully installation to the side supports with no gaps.

ROKIOTOEX will warranty all ROKIOTOEX brand car rack systems and its accessories manufactured by ROKIOTOEX during the time that an original retail purchaser owns the product. This warranty terminates if a purchaser transfers the product to any other person.

Subject to the limitations and exclusions described in this warranty, ROKIOTOEX will remedy defects in materials or workmanship by repairing or replacing, at its option, a defective product without charge for parts or labor. In addition, ROKIOTOEX may elect, at its option, not to repair or replace a defective product but rather issue to a purchaser a refund equal to the purchase price paid for the product or a credit to be used toward the purchase of a new ROKIOTOEX load carrier system.

No warranty is given for defects caused by normal wear and tear, cosmetic rust, scratches, accidents, unlawful vehicle operation, or modification of, or any types of repair of, a load carrier system other than those authorized by ROKIOTOEX.

No warranty is given for defects resulting from conditions beyond ROKIOTOEX's control including, but not limited to, misuse, overloading, or failure to assemble, mount or use the product in accordance with ROKIOTOEX's written instructions or guidelines included with the product or made available to the purchaser.

No warranty is given for Rokiotoex products purchased outside of the United States, Canada and Mexico.

In the event that a product needs to be returned to ROKIOTOEX, a ROKIOTOEX technician at the address or telephone number listed above will provide the purchaser with the appropriate mailing address and any additional instructions. Please note that the purchaser will be responsible for the cost of mailing the product to ROKIOTOEX and that proof of purchase in the form of an original purchase invoice or receipt and a detailed description of the defect must be included in the mailing.

DISCLAIMER OF LIABILITY
REPAIR OR REPLACEMENT OF A DEFECTIVE PRODUCT OR THE ISSUANCE OF A REFUND OR CREDIT (AS DETERMINED BY ROKIOTOEX) IS A PURCHASER'S EXCLUSIVE REMEDY UNDER THIS WARRANTY. DAMAGE TO A PURCHASER'S VEHICLE, CARGO AND/OR TO ANY OTHER PERSON OR PROPERTY IS EXCLUDED.

THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. ROKIOTOEX'S SOLE LIABILITY TO ANY PURCHASER IS LIMITED TOTHE REMEDY SET FORTH ABOVE. IN NO EVENT WILL ROKIOTOEX BE LIABLE FOR ANY LOST PROFITS, LOST SALES, OR FOR ANY CONSEQUENTIAL, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR PUNITIVE DAMAGES OR FOR ANY OTHER DAMAGES OF ANY KIND OR NATURE.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT BE APPLICABLE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.